

The crown of tube amplification



Certificate of origin

This handcrafted product was special made for your high demands, to display the music on its finest way. We guarantee, that this amplifier was carefully produced and tested in all details.

Mr. Helmut Becker

[Manager Production & Development]

Sign:

since 1982



Eclipse

SE - reference line – pre - amplifier

We congratulate you with the purchase of this superb AUDIO VALVE HiFi component.

This handcrafted product has been manufactured with only your most demanding requirements in mind. It was made to allow you many years of musical joy.

AUDIO VALVE guarantees that this amplifier has been produced under the strictest of guidelines and with respect for procedures acquired through decades of tube amplifier design. Your Eclipse Pre-amplifier has been thoroughly tried and tested in all detail.

Table of contents

1. Introduction and general information
 2. Manufacturers information
 3. Safety precautions
 4. Intended use / Application / Factory assembly & getting started
 5. Operating instructions & technological data
 6. Warranty
 7. Home theatre loop
-

1.Introduction

Dear client, we congratulate you on your purchase of this superb AUDIO VALVE HiFi component.

To safeguard maximum functionality and to avoid operating problems, it is important that you carefully study this owners manual and that you follow all instructions therein precisely!


General information


Important instructions, reagrding safety, security and operational reliability while using the Eclipse Pre-Amplifier are highlighted throughout this manual.


2. Herstellernachweis


Factory address:


AUDIOVALVE, Mr. Helmut Becker,
Umbachsweg 70
D-34123 KASSEL - GERMANY,

 0561 - 701 33 60

 0160 910 77 376

 0561 - 60 2929 3

 info@audiovalve.info

 www.audiovalve.info

U-St.Ident.Nr.: DE 195 191 420
WEEE-Reg.Nr.: DE81178274

3. Safety precautions

Important: Study the owners manual before assembly and operation of the amplifier

Anyone, unable to comprehend the instructions stated in the owners manual should not operate the device.

Children and minors are not to use the device and should be kept at a safe distance from the device while it is running.

The user is responsible for operating the device in an appropriate fashion and it takes full responsibility towards third parties. Before the amplifier can be used the first time, suitability of taken precautions regarding electrical safety must be approved through professional assessment

Check that the mains voltage printed on the rear panel of the amplifier corresponds with the line voltage in the territory where you intend to use the amplifier.

Always check powercords and plugs for damage before use.

Disconnect the powercord before work is being done on the amplifier.

In the unlikely case of a failure of the device repairs may be performed by AUDIO VALVE authorized technicians only.

Use ORIGINAL spare parts only!

Please take note of the fact that **we waive product liability** for damages caused by our devices, parts and components as a result of:

- a) Unprofessional and/or faulty and/or correct repairs that have been performed in other than the by AUDIO VALVE approved repair facilities,
- b) Usage of other than ORIGINAL and approved spare parts.

The Eclipse Pre-Amplifier is subject to and complies with German security class 1 for devices with metal housing. The device is grounded, and may not –by manipulation or otherwise- be ungrounded for any reason! To prevent humm as a result of interconnecting your devices with the Eclipse Pre-Amplifier, the internal electrical circuitry has been designed to have no grounded mass!!

4. Intended use / Application

AUDIO VALVE Hi-Fi Amplifiers are intended for use under the following circumstances only:

- To play and transfer music of any make and fashion when this occurs in private dwellings or studios.
- All devices must be operated under moderate climatological circumstances, comparable to those under which human beings usually live. When the surrounding temperature is too high, the device will heat up beyond its optimal parameters. This can damage the amplifier. Proper ventilation will be needed, and the amplifier should not be covered in. Allow approximately 3 cm of air sidewise and approximately 4 cm above the amplifier to cool the amplifier.
- Unusually high humidity of the air increases the risk of shortcircuits in the device because of the increased conductivity. This reduces the internal insulation values dramatically and will eventually result in a malfunction of the amplifier. This increased conductivity also might endanger the user of the device. In general terms the amplifier should not be used for other than its intended purpose.

Factory assembly & getting started

Once the amplifier has arrived at its desired destination, make sure the amplifier has ample time to adjust to the climate at its new location. It is likely that the changes in temperature and humidity between the last location and the new one, has caused condensation to build up somewhere in the amplifier. This can damage the device. Please allow the amplifier at least two hours to acclimatise. The amplifier comes fully assembled, ready to go. The powercord should not be used as yet, please connect all other input and output connectors first (cinchcables, speakercables, etc). The device **MUST** be switched off while connecting it to other components, it might be damaged if this is done with the amplifier under power. The person operating the amplifier might be hurt as well in this case, since powerspikes, operating currents and voltage charges may occur! Check whether the ON/OFF switch is in the OFF position. If so, you can now plug in the powercord. Use high quality cables only! Usage of DIY cables, low spec cables or cables intended for other use voids all warranty and cancels any product liability. Make sure all plugs are connected tightly to the amplifier. When in doubt, replace the cable.

Always use the device in a 'complete configuration', damages may occur when devices are not connected to the amplifier when it is being run.

Never lift the device by its glass cover, not even when there are grips attached to the cover. The grips and the cover are there for ornamental purposes only. They make the amplifier look nice. The amplifier should be positioned at a level surface, in time the construction of the glass housing may fail as a result of tensile forces.

Please disconnect and move the amplifier when you replace tubes. Replace them at a place where you can work easily. You might damage the 'motherboard' if you replace the tube in an awkward position. After that please check all connectors. If all connectors are undamaged, make sure the switch is in the OFF position, reconnect the powercord and switch the amplifier on. You can make sure the amplifier is properly connected by checking the tubes. Only the inside of the tube should glow. If the steel coverjacket glows as well, the device is faulty and must be serviced immediately. As a rule of thumb the device should work now. Don't push the volume up to its maximum just yet, allow the device to burn in smoothly and avoid powerspikes.

The Eclipse Pre-Amplifier needs at least a 10 Ampere circuit breaker between its powercord and the mains. Make sure your wallsocket is equipped in such a fashion.

Controls and operation on the front side

The frontside of the Eclipse has a number of controls, whose function should be elaborated upon. We start from the left:

The **left selectorswitch** balances the outputs and allows you to MUTE the amplifier or put it on STAND BY. The five LEDs under the knob indicate the chosen setting, each possible setting has its own LED.

When the outermost left LED is lit permanently, the device is in STAND BY mode, e.g. the tubes are heated up but no anodecurrent is passed through them. Simultaneously the outputs of the amplifier are muted, which is represented by the lighting of the orange LED for MUTE, next to the red LED for STAND BY. The STAND BY position is remote controllable.

When you turn the left selectorswitch ONE POSITION to the right, you mute the amplifier. This is represented by the second LED from the left. The LED is orange and it blinks to underline the MUTE position the amplifier is in. When muted, the outputs are shorted to prevent signal leaving the amplifier. The MUTE position is remote controllable as well.

When switched on, the amplifier is allways in MUTE during the first minute. This prevents powerspikes that may be caused by the large magnetic coils to reach the outputs. When the safe MUTE period is over the amplifier is ready for use.

When you select the centre position with the selectorswitch, output 1 is selected as the functioning amplifier output, this is represented by the green centre LED of the five. The slection of functioning outputs is available through the selectorswitch only, the remote control doesn't allow you to select this option. The balanced XLR output is always switched on, regardless of the slected cinch output.

Position four of the selectorswitch selects output 2 as the functioning output, a second green LED shows you you've selected this option.

The fifth (and last) setting of the selectorswitch allows outputs 1 and 2 to function simultaneously.

Just as a reminder: The outputs can only be selected through the selectorswitch.

On the righthand side of the outermost left selectorswitch, another selectorswitch allows you to select seven different input devices, each represented by seven green LEDs.

The first LED from the LED corresponds with the most left input, which is CD1. The next LED is for the next input, etc. A maximum of seven devices can be used as input devices with the Eclipse Pre-Amplifier.

If you turn the knob into the eighth position (no LED lighting up), you activate the remote controled selection of input devices.

 
There is a nineth position you can select with the second selectorswitch. This activates a generator which mechanically cleans all relais in the Eclipse Pre-Amplifier. When selecting ths option, turn down the volume completely first and disconnect your power amplifier before switching to the nineth position. The mechanical usage of the connectors through the generator prevents the buildup of oxidation on the contacts. We advise you perform this cleansing of the contacts approximately 10 minutes per week.

To clean the contacts in the preamplifier.

1. Make sure the amplifier is off , 2. put preamplifier in standby, turn selector switch – the second switch from the left ,
2. which is ninth position, with volume at zero , you will see the flashing L.E.D lights flashing ,and a clicking sound , this is normal .
3. Proceed to do this for ten minutes once a week.

The cleaning option is available through the selector switch only.

Both remaining switches on the righthand side serve volume control and ballance adjustments. Volume can be changed through both the controlswitch and the remote control. Underneath the volume control a red LED acknowledges the receipt of signal from the remote control. Secondary to this function, the LED is a control mechanism for the proper functioning of the remote control. The balance is meant as fine-tuning between both stereo channels only, the maximum adjustment lies around +/- 3 dB. It is not meant to serve as a means to switch one of the channels off completely. The fine-tuning of channels can not be performed with the remote control.

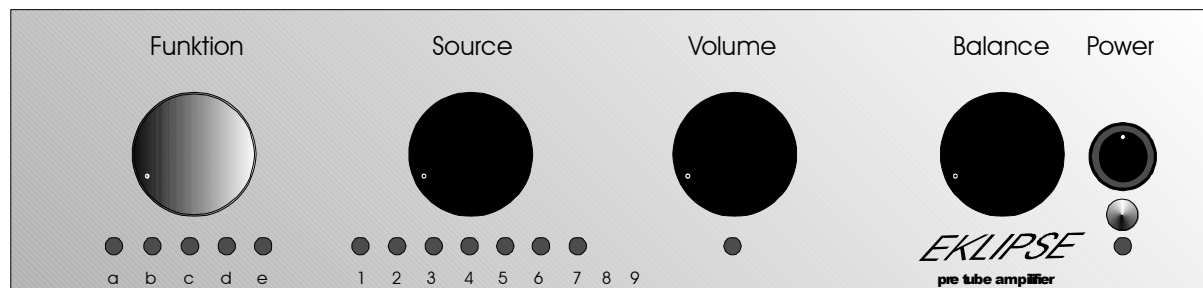


At the uttermost righthand side of the front panel, you find the ON/OFF switch which allows power into the unit or shuts it down. When you touch the white indicator on the switch, the device is switched on. A blue LED under the ON/OFF switch indicates whether the device is switched on or not. A shining blue LED means the amplifier is switched on.

Also under the ON/OFF switch you'll find the receptor for the infrared remote control unit. Keep this receptor free to receive signals at all times. There is virtually no limit to the angles under which the amplifier will be able to receive a signal from the remote control. The amplifier can only be switched on and off through the switch on the front of the amplifier.

A short overview of the options, both manually and with the remote control

 - STAND BY – manually and remote control
- MUTE – manually and über RC
- Output 1) Cinch) – manually
- OUTPUT 2 (Cinch) – manually
- Beide Output – manually
- XLR always functional
- Input devices manually and RC (manuell prevails)
- Relais cleaning mode – manually
- Volume – manually und RC
- Balance – manually
- ON/OFF manually (ON/OFF switch)

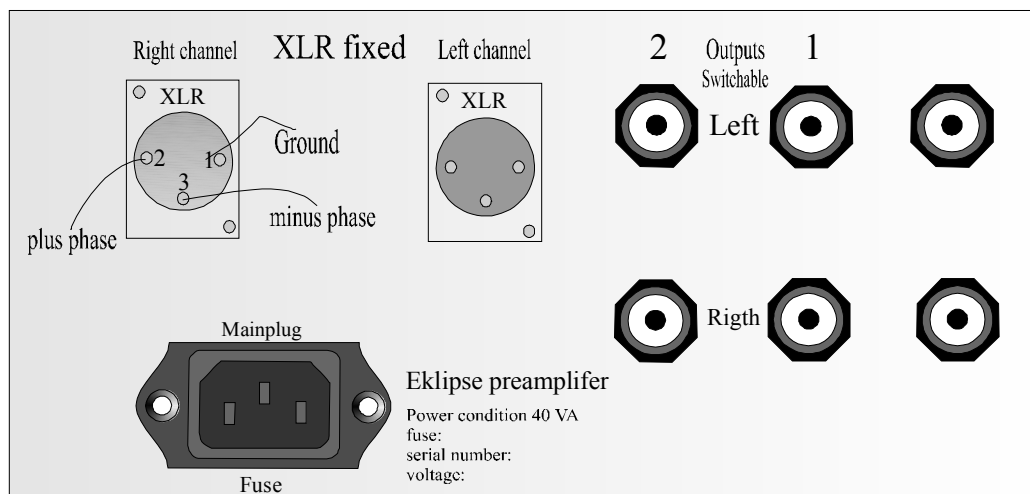

Description of the rear panel

The following description deals with the rear panel of the Eclipse Pre-Amplifier, seen from behind.

The black socket on the lower lefthand side is AC mains input, conforming to Euro mains input specifications. The overload fuse is integrated into the same socket.

When the amplifier runs on 117 Volts, a 2 Ampere fuse must be used. When it runs on 235 Volts, a 1 Ampere fuse must be used.

Never change a fuse when the amplifier is connected to the mains or when you are unsure about the proper functioning of the device. Never replace a blown fuse with a other values than printed on the unit!

 
Above the AC socket you find two balanced XLR amplifier outputs, that are always active. You can use these outputs when you find them suiting your requiremens better than RCA/Cinch outputs. The XLR outputs only relay the positive sourcesignal, the negative source (or negative contact) of these XLR outputs is connected to the amplifiers mass. This type of XLR is also known as "FAGE" output.

Netx to the XLR outputs you'll find the Cinch/RCA outputs that provide the output signal of this Pre-Amplifier. The contents of the signal being relayed ca be determined by the outermost righthand selector switch on the front panel of the Eclipse Pre-Amplifier.

Next to both outputs you find the "REC OUTPUT" connector, which relays the signal transmitted inside the amplifier, without amplifying it. This signal is just the signal that entered one of the inputs and can be used for further processing in e.g. a tape unit or a digital mastering device.

The remainder of cinch connectors has been assigned to the source devices, as indicated with the selector switch on the front panel.

The technical specifications of the inputs are describted in detail in the technical data supplement.

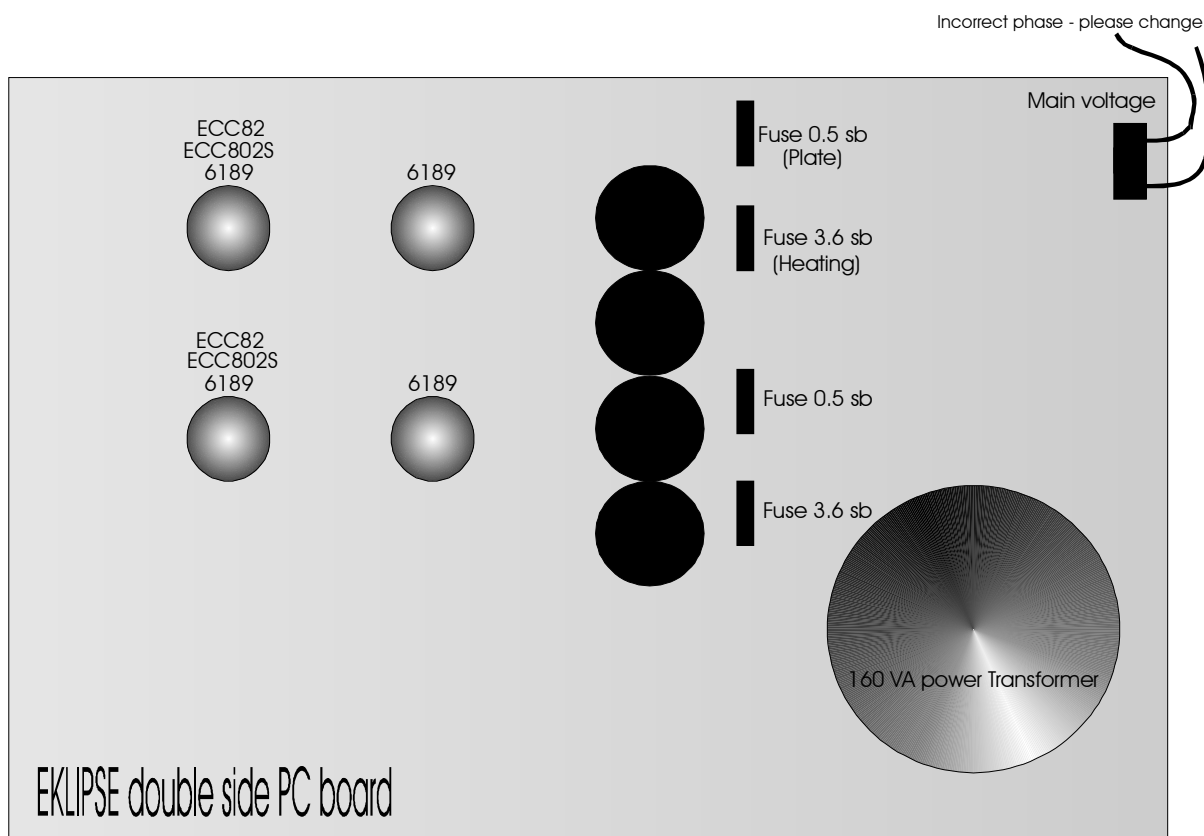

Whenever you perform any service or modification to the Eclipse Pre-Amplifier, make sure the device has been disconnected from the mains and leave the work to a professional only!

The design of the circuit board allows you a view upon the most important element that might be subject to service or modification.

The circuit board provides you with a blueprint of the amplifiers design and gives you full view of the components that may be most interesting to you, the user.

The four tubes are identical, and are part of the ECC 82 family. This renders the amplifier relatively overloadproof. The two lefthand side tubes provide the input to one channel, the righthand tubes take care of the other channel. The amplifier transmits phased amplified signals, which means you do not have to bother about your speakers' polarity as long as you stick to the colourcoding of your cables.

Paramount for the sound quality are both lefthand tubes (the entrytubes), since they amplify the signal being put into them. Please don't economise on these tubes. The righthand tubes (the exit tubes) are much less demanding when it comes to quality.

When you think the AC current entering your amplifier is out of phase with the amplifier, you might consider switching both wires under the tripolar connector on the upper righthand side. Thus you reverse the AC flow, and therewith the polarity. Never do this when the amplifier is still connected to the mains. Please consider having this modification done by a professional electrician.

Another worthwhile subject is the 4 fuses that are part of the double mono channels. The 0.5 Ampere fuse deals with the anode current, the 3.15 Ampere fuse warrents against overheating of the respective channels. As a rule of thumb, these fuses never blow since the current is automaticaly modulated to acceptable levels at startup.

Should a fuse blow regardless, never change it for a fuse with different specifications!

Fuses blow for a reason. Eventhough AUDIO VALVE equipment is made to last untill the end of time, sometimes things do break. Ask for our help when this happens.

When you decide to replace pin-compatible tubes, always switch the Eclipse amplifier off before doing so. And make sure all pinns actually enter the sleeve of the receptor. Pins have a tendency to wander outside their assigned realms...

The Remote Control

The remote control is easy to use, just press the button corresponding with desired functionality.

About once a year the two 1.5 Volts batteries must be changed. To change the batteries open the batery cover on the back of the RC. Change the bateries and close the cover. Make sure the batteries are placed in the right polarity.

When you have questions regarding the change of batteries, please consult your vendor or give us a call.

The M2R and IR2R function identically, except for the absence of a remote control with the M2R. The RC functions are taken care of by brass selectors on the M2R.

Setup

Please remove the 4 screws of the back side and then remove the panel.

Make sure that the batteries are fitting tight at their place.

On the PC board you can see a little blue LED.

Now press at the same time the volume **up and down button together**, untill the LED flashes, then stop doing so.

If it flashes 1 time, the remote is for the **CONDUCTOR**

2 times for the **EKLIPSE**

and 3 times for the **ASSISTENT 50 / 100**.

You can change the program of the remote by pressing the buttons of the volume, untill the LED is flashing as much as you need to be the correct program.

The Eclipse Concept

The Eclipse boasts a huge amount of inovative solutions that are hard to find in tube-amplifiers in this pricerange. Ofcourse, the Eclipse is a pure-tube amplifier, the signal meets nothing but tubes on its way out.

To balance currents in the tubes and to make sure they operate at peak efficiency within their tollerances, semiconductors are used. The Eclipse has been designed to be a pure double mono amplifier, which means both channels have their own power supply. A design characterisric that is no standard option with even much more costly devices. The technicians among you may be pleased to know that the amplifier section is **difference** amplifier built, meaning that the output signal is phase-opposed to the input signal. The balance potentiometer has been integrated into the input of the pre-amplifier. The volume control is a technical beauty as well. Naturally, the volume is controlled through an ALPS potententiometer. Contrary to common design, the volume control has not been integrated in the the amplifiers input bur in the final kathode-stage of the amplification proces.

When you switch the volume off, the Eclipse is SILENT. Please note both the minimal background noise and the equally low input noise level the Eclipse Pre-Amplifier scored in tests

That is no mean feat. Like all AUDIO VALVE amplifiers, the Eclipse has been designed to be a timeless piece, a high class powder coated 4mm thick lasercut steel with gilded connectors. That concludes the basic technical description of the amplifier, continue reading for the really important stuff.

IIMPORTANT: In the 4th quarterly issue 2000 of the american HI-FI magazine "ULTIMATE AUDIO" the EKLIPSE and the CHALLENGER have been tested and reviewed exhaustingly. These tests will probably answer any questions regarding musical performance and technical specs you might have.

Technical Data:**Specification****EKLIPSE**

Concept:	high class double mono pre-amplifier
Output Level:	15 V max.
Power Bandwide:	4 - 45.000 Hz
Distortion:	0,2 % max. (1V)
Noise:	0,05 mV (volume noise limiter) (-110 dB)
Inputs:	7 Line In, & 1 Line Out
Outputs:	fage XLR, two switch able RCA terminals, one REC. out – all in phase
Output Impedance:	200 Ohms
Power Consumption:	40 Watt
Line Voltage:	117 up to 260 VAC
Valve Line - Up:	4*6189 (or equivalent)
Spec.-Features:	Stand By & Mute Function, remote – Control, relays cleaner 160 Watt power transformer, "switch one" current limiter
Dimensions:	(w-d-h)420 * 320 * 130 mm
Weight Net:	20 kg

NEW FEATURE since 2009 - "home theatre bypass"

The Audio Valve Eclipse Pre - amplifier now has an optional **Home Theater Bypass** "Direct Output" feature.

This feature is especially useful with a combination home theater system and two channel stereo system. It enables you to use the volume control of your home theater processor without have to make any connection cable changes from your stereo system.

How It Works

To enable this function, simply connect your home theater processor to "Tape In" (RCA connectors on back) and turn the input knob to "Tape In" and the signal passed directly to the XLR output connectors going to your amplifier. This way you can use the volume control of your processor without any influence from the Eclipse. Switch the input knob to any of the other inputs to go back to normal stereo use.

Please note, that the volume control on the Eclipse is no longer in use when the Home Theater Bypass mode is enabled. Be careful, or you might experience full level output
!!!

WARRANTY

AUDIO VALVE warrants its components for a three-year period on all electronics and a 90-day period on the tubes from the purchase date.

In the event of a failure of your amplifier, AUDIO VALVE will repair or readjust this unit or, should the occasion arise, will replace it provided that all conditions stipulated in this warranty are met.

In order to initiate service of any kind it is necessary to obtain distributor or dealer authorization prior to shipping the unit for service.

Any of the following conditions shall void the warranty:

- Operation not in accordance with this manual.
- Abuse , accidental damage or unauthorized modifications , as determined by AUDIO VALVE or its agents exclusively.
- Removal, defacing or falsifying of the serial numbers.
- Shipping without the original complete factory crates.

WARRANTY REGISTRATION

Please fill out and return this warranty form to the US distributor within 15 days of the purchase date or use our ONLINE form on our website.

- MODEL : _____
- SERIAL NUMBER : _____
- PURCHASE DATE : _____
- AUTHORIZED AUDIO - VALVE DEALER:

- PURCHASER`S NAME : _____
- STREET ADDRESS : _____
- CITY : _____
- ZIP / POSTAL CODE : _____

Send to : AudioValve, Umbachsweg 70, 34123 KASSEL - Germany

CE – Conformity

Declaration Of Conformity

Manufacturer: AudioValve,

Germany, 34123 KASSEL, Umbachsweg 70,

info@audiovalve.info

Product Name: EKLIPSE

Product Type: Audio Amplifier

Complies with Standards:

LVD: 92/31/EEC, 93/68/EEC, & 73/23/EWG

Safety: EN60065

EMC: EN55013, EN55020, EN55022, EN55103, EN61000-3-2,
& EN61000-3-3

The official Declaration of Conformity for this product is kept on file at:
AudioValve, 34123 Kassel, Umbachsweg 70, Tel. 05617013360



:: AUDIOVALVE – ORIGINAL CERTIFICATE of testing ::

Kunde:

Modell: **EKLIPSE**

Datum:

Ser.-Nr.

Mechanische Baugruppen	Gehäuseaufbau <input type="checkbox"/> lackierte Teile <input type="checkbox"/> gedruckte Blenden <input type="checkbox"/> Pfosten im Winkel <input type="checkbox"/>	Prüfer: Börger <input type="checkbox"/> Markgraf <input type="checkbox"/>
Technische Baugruppen	Optische Leiterplattenprüfung vor Einbau <input type="checkbox"/> Sitz aller Kabel, zugfest und isoliert <input type="checkbox"/>	Prüfer: Börger <input type="checkbox"/> Markgraf <input type="checkbox"/>
• Elektronik	Alle Gleichspannungen gemessen <input type="checkbox"/> Signale linker & rechter Kanal <input type="checkbox"/> Geräusche <input type="checkbox"/> Balance (nach rechts-rechts mehr) <input type="checkbox"/> log. Lautstärke <input type="checkbox"/> home theatre <input type="checkbox"/> Eingänge – Ausgänge, Cinch/XLR <input type="checkbox"/> Relais und Empfindlichkeiten <input type="checkbox"/> Fernbedienung <input type="checkbox"/> alle LED vorne <input type="checkbox"/> (siehe separates Protoll für jeweiliges Modell unten) *nicht zutreffendes streichen	Prüfer: Börger <input type="checkbox"/> Markgraf <input type="checkbox"/>
Optische Endkontrolle	Äusserliche Sichtprüfung <input type="checkbox"/> lose Teile <input type="checkbox"/> fehlende Schrauben <input type="checkbox"/> keine Kratzer, Lack & Oberglas <input type="checkbox"/> Sitz aller Muttern / Schrauben oben / unten <input type="checkbox"/> Federleisten, Blenden, Seiten - fest <input type="checkbox"/> Seriennummer, CE Sticker <input type="checkbox"/>	Prüfer: Börger <input type="checkbox"/> Markgraf <input type="checkbox"/>

Meßtechnischer Teil:	Soll	links	rechts
Hochspannung	275 V	<input type="checkbox"/>	<input type="checkbox"/>
Heizung	13,7 V	<input type="checkbox"/>	<input type="checkbox"/>
Prozessor	13,3 V	<input type="checkbox"/>	<input type="checkbox"/>
Kathode Ausgangstreiber	124 V	<input type="checkbox"/>	<input type="checkbox"/>
Anode Eingangsröhre links	95 V	<input type="checkbox"/>	<input type="checkbox"/>
Signalspannungen	Alle Eingänge	<input type="checkbox"/>	<input type="checkbox"/>
	Ausgang 1+2+XLR	<input type="checkbox"/>	<input type="checkbox"/>